

How do I switch the assist levels of my e-bike?

The support levels of your e-bike can be easily switched with the left and right arrow keys of the coachsmart LEV. There are three different support levels:

- L0 – no support Level
- L1 – the lowest support level
- L2 – the middle support level
- L3 – the highest support level (turbo)

The abbreviations L0 - L3 are always shown on the display for a few seconds when you are switching the support level, so that you always have an overview of the support level you are currently using. One of the three following symbols is always displayed in the middle left area of the display:

▼ stands for the lower assist level (L1), ■ stands for the middle assist level (L2) and ▲ stands for the highest assist level (L3).

Unique solution ID: #1207

Author: Support

Last update: 2017-12-01 16:37