

coachsmart LEV

What does it mean when E 000/ E 001/ E 002/ E 003/ E 004 appears on the display?

Usually the Coachsmart LEV does not show a field with an Error Code. The field only becomes visible if the e-bike has an error.

The error codes have the following meaning:

E 000 - no error

E 001 - **BAT**tery error (temporary)

E 002 - **DRIV**etrain error

E 003 - **BAT**tery error (End of Life) - in this case, you should contact your supplier and exchange the battery

E 004 - **HOT** - the drive unit is overheating

E.g. in case of a temporary drive train error the display shows the numeric error code "E 002" alternating with "E dri". When the error condition is resolved the field shows E 000 again.

Unique solution ID: #1224

Author: Eliska Mastrakova

Last update: 2018-05-22 11:22