

## macrofree

# **Macro does not record any data anymore - before it worked without any problem.**

If no data has been recorded during your trip even though you started your stopwatch this may be due to a low battery voltage. Please change the battery to solve this problem.

Unique solution ID: #1041

Author: o-synce support team

Last update: 2011-01-17 15:37