

## macrohigh x

### **Speed is jumping or not shown at all.**

If the spoke magnet is not fixed in the correct position to the speed sensor it can lead to speed jumps on the display of the bike computer.

Therefore take care that:

- the distance between the magnet and the speed sensor does not exceed 4mm.
- the magnet is at the same height as the sensor marking.

The marking can always be found at the top or at the bottom of the sensor.

Unique solution ID: #1029

Author: o-synce support team

Last update: 2013-11-26 15:24